

ZIPPER WHEEL MOUNTING INSTRUCTIONS

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation.

Remove the original closing wheels, and use the existing 5/8" x 3.5" bolt and nut to mount the Zipper wheels to your tail section. The **gold spiked wheels are rights**; the **silver spiked wheels are lefts**. The tips of the spikes must be pointing out, away from the tail section.

When mounting Zipper wheels, measure the space between the cast rings directly under the lowest point of the rim. **There needs to be 2"- 2.5" distance between wheels** at this point.

You may need to insert washers or spacers on the inside of each wheel in order to achieve this distance.

You will not need spacers if you are running the Zippers with the G2 liquid fertilizer disc. The spacers are already built into the G2.

Zipper Wheel Package Contents (per single side)	
Item	Quantity
Zipper Wheel	1
1/2" Spacer	1
1/4" Spacer	1
Instruction Sheet	1

