

PRESS WHEEL SCRAPER MOUNTING INSTRUCTIONS

Case IH Planters

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation


NOTE: The following instructions are for mounting press wheel scrapers to Case IH planters both with and without the Furrow V Closer. Planters using the FVC take a different mounting bracket and bolt kit.

STEP #1:

Bolt the scraper bracket to the press wheel arm bracket:

Planters with FVC: Use the four 3/8" bolts and lock nuts.

Planters without the FVC: Use the two 1/2" bolts and nuts and the existing press wheel bolt.

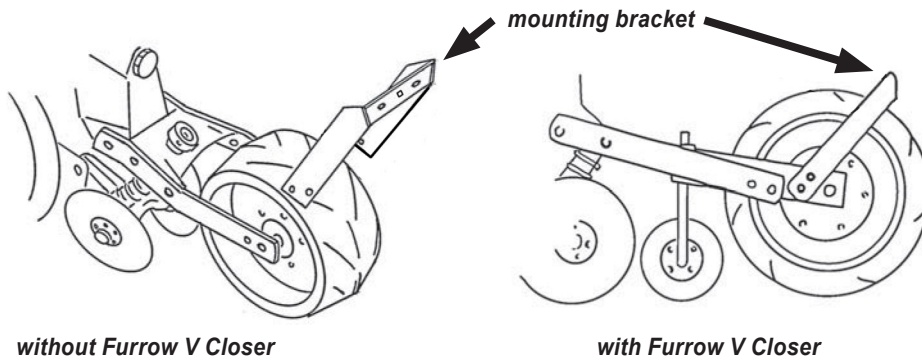

Press Wheel Scraper Package Contents with FVC (per single row)

Item	Quantity
Mounting Bracket.....	1
Plastic Scraper.....	1
3/8" x 1" Bolts.....	4
Lock Nuts.....	4
1/4" Whiz Bolts.....	2
1/4" Nuts.....	2
Instruction Sheet.....	1

Press Wheel Scraper Package Contents without FVC (per single row)

Item	Quantity
Mounting Bracket.....	1
Plastic Scraper.....	1
1/2" x 1" Bolts.....	2
1/2" Nuts.....	2
1/4" x 1" Whiz Bolts.....	2
1/4" Whiz Nuts.....	2
Instruction Sheet.....	1

STEP #2:

Bolt the plastic scraper to the top side of the mounting bracket with the 1/4" whiz nuts.

Adjust the scraper to wipe the mud off the press wheel, and tighten the bolts.



without Furrow V Closer



with Furrow V Closer

Final Assembly